


Art3318

Piston Type Pressure Reducing Valve

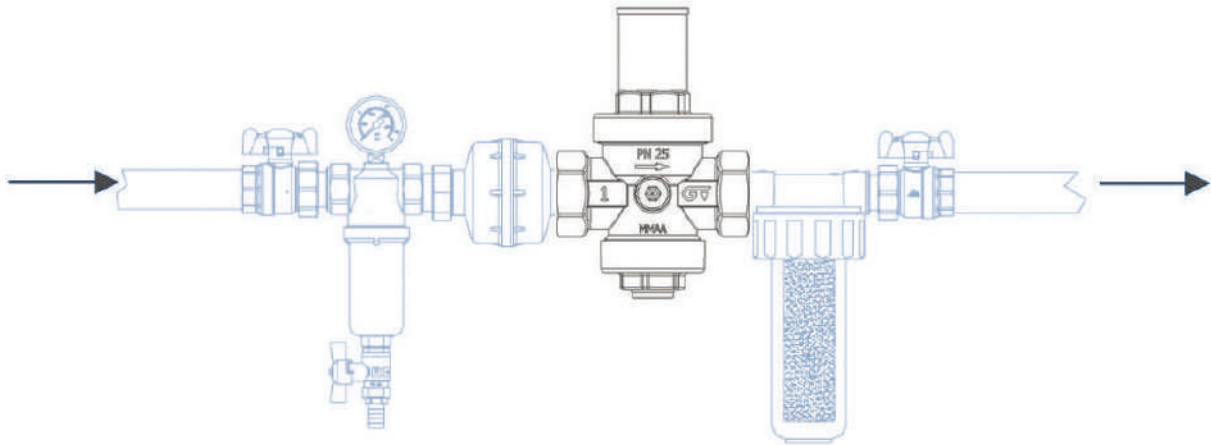

INSTRUCTIONS FOR INSTALLATION

The pressure reducing valve must be installed respecting the arrow direction, engraved on the body. In order to guarantee a secure and long lasting functioning. It is recommended to install a filter before the pressure reducing valve in order to avoid that impurities in the water may compromise the correct functioning.

SETTING INSTRUCTIONS

This pressure reducing valve has been preset at 3 bar. If necessary the outlet pressure can be changed, operating as follows:

All items (taps etc.), after the pressure reducing valve must be closed.

To reduce the outlet pressure (rotating counter clockwise), you must unscre the screw placed on top.

To increase the outlet pressure you must SCREW the screw (rotating clockwise).



NOTE: In order to simplify this operation, install a pressure gauge on the body of the pressure reducing valve instead of the plug which will indicated the reduced outlet pressure.

